

SOFTWARE UPDATE PROCEDURE FISH FINDER Model FCV-600/800

This document provides the procedures for updating your FCV-600/800 software with a USB flash memory.

Note 1: Updating the software does not affect user data stored in your FCV-600/800.


Note 2: The appearance of the software update display depends on your current software version.

Note 3: Do not use a USB flash memory with security features.

1. Prepare the software for update

1. Download the software (zip file) from the following Official Website to your PC.
<https://v1.furunosoftware.com/download.html>

2. Unzip the downloaded file and copy the "USBupdate" folder for the model to be updated to the root directory of a USB flash memory.

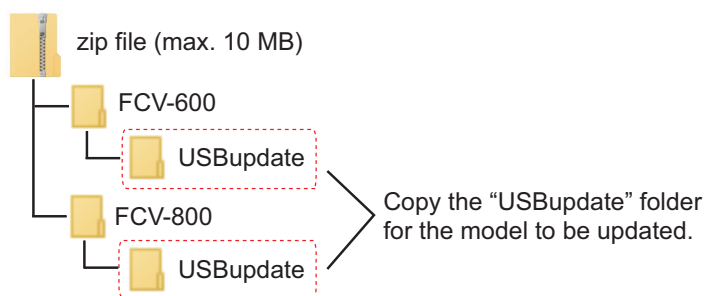


Note : You can update the software even if the other files are saved in the USB flash memory.

2. Update procedure

1. Press the **⏻/BRILL** key to turn on the power.
2. Insert the USB flash memory that the "USBupdate" folder is saved in the USB port on the back of the FCV-600/800.
3. Press the **MENU/ESC** key to open the menu.
4. Select [Service], then press the **KNOB**.

Menu	Service
Sounder	Serial
Display	Demonstrate :Off
Alarm	Diagnostic Test
Data	LCD Test
▼ System	Wireless LAN Test
Range	Menu Setting Export
Key	Menu Setting Import
Language	Update
Units	Factory Default Settings
Network	⏻ : Select
Calib	⏻ : Enter
Transducer	[MENU] : Back
Service	


- Select [Update], then press the **KNOB**.
The message “Update and Restart?” appears.

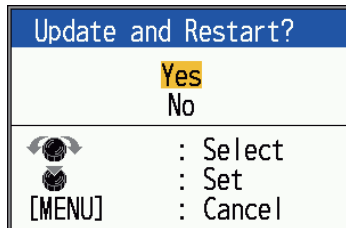

- Select [Yes], then press the **KNOB**.
After the FCV-600/800 automatically restarts, the update starts.



During the update.

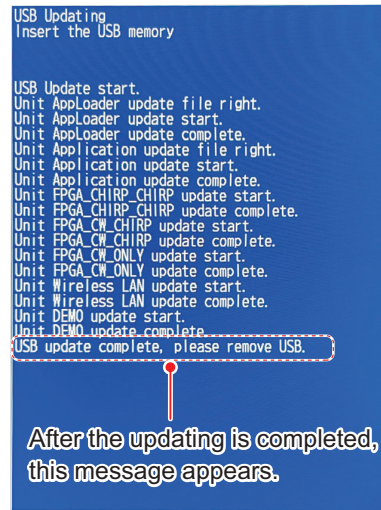

After the updating is completed, this message appears.

The update is completed.

Note: Do not operate any key or the **KNOB** during updating. Also, do not remove the USB flash memory from the FCV-600/800.

- After the updating is completed, the message “USB update complete, please remove USB.” appears on the display. Remove the USB flash memory.

Note: After removing the USB flash memory, the update screen disappears and the system is rebooted automatically.

- After completing the system reboot, check that the software version is the latest, on the **MENU/ESC** → [Service] → [Diagnostic test].

